 


# INTERNAL & EXTERNAL CABLES



## POWER ADAPTOR CABLES

S-Z-CABLE	PC Internal Power Splitter Cable
S-Y-CABLE	Internal Power Splitter Cable
S-Y-COMBO	PC Internal Combo Power Splitter Cord
S-Y-MIX-6"	Mixed Internal Power Splitter Cord
S-Y-PWD-6"	3-1/2 FDD Power Splitter Cord
S-PWD-6"	3 1/2" FDD Power Adaptor Cable
S-CORD-10"	Internal Power Extension Cable

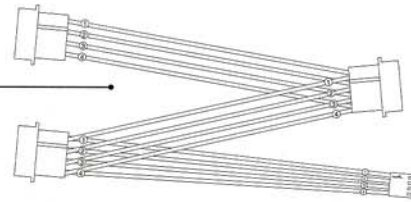

S-Z-CABLE

 
 
INT-44PWR	44 Pin 2.5" To 3.5" 40 Pin IDE + Power Cable
INT-44PWR2	ATX Power Supply to BTX MB Main Board
INT-AT-EXT-1'	AT MB Power Extension Cord, 1 foot
INT-ATMB/ATX	AT MB To ATX Power Adaptor Cable
INT-ATXEXT-1'	ATX MB Power Extension Cable, 1 foot
INT-ATXMB/AT	ATX MB To AT Power Adaptor Cable
INT-BTXMB/ATX	BTX MB To ATX Power Adaptor Cable
INT-BTX24/ATXEXT	BTX(20+4 Pin) Plug to ATX(20 Pins) Socket Cable
INT-PSP-1	Internal Power Split Out Cable #1
INT-PSP-2	Internal Power Split Out Cable #2
INT-PSP-3	Internal Power Split Out Cable #3
INT-PSP-4	Internal Power Split Out Cable #4



SAT-PWR-12"



INT-PSP-2

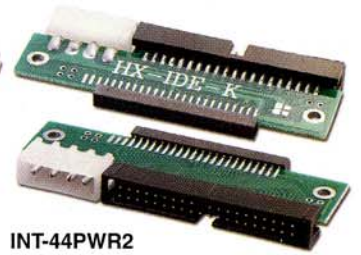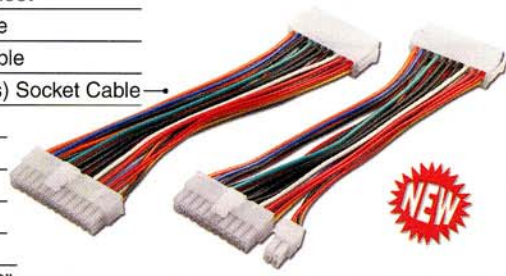


INT-44PWR2

SAT-PWR-12"	Serial ATA Power Adaptor Cable, 12"
SAT-PWRSIG-12"	SATA Power + Signal Combo Adaptor Cable, 12"

## SATA INTERNAL SIGNAL CABLE

 - Right Angle.

SAT-SIG-18"R

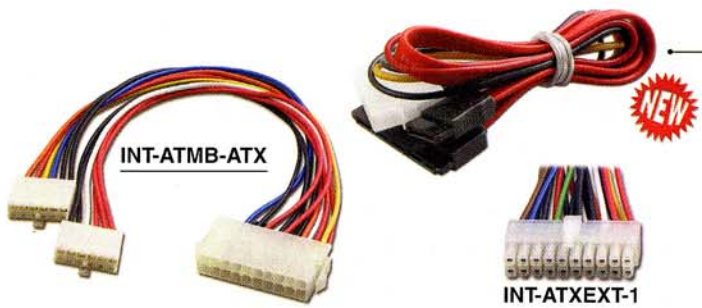

INT-ATMB-ATX

INT-ATXEXT-1



## EXTERNAL SATA SIGNAL CABLES (eSATA)

- Shielded, for external use cable Assembly.

SAT-SIGE-18"

SAT-SIGE-03'

SAT-SIGE-06'

## INTERNAL to EXTERNAL SATA Transition Cables

- Serial ATA.

SAT-SIGADE-12"

SAT-SIGADE-18"

SAT-SIGADE-24"

SAT-SIGADE-36"



## PC BRACKET for eSATA SOCKET

BRK-SATSGX



## IDE / PATA to SATA ADAPTORS

ADL-R2SA-NHD Fit on back of ATA / IDE Hard Drives.

ADL-R2SA-NMB Fit on IDE Port of Motherboards.



Blister Packaged

