

CELLULAR LEATHER CASES



PART NO.	FITS
AT&T	
CEL-19LC	3610
CEL-24LC	3810
CEL-25LC	3830
CEL-27LC	3850
CEL-38LC	6650
CEL-39LC	3630
CEL-43LC	3620
CEL-45LC	3760
CEL-65LC	3770
CEL-69LC	3625
AUDIOVOX	
CEL-2LC	MVX700/750/425
CEL-3LC	MVX800/850
CEL-4LC	MVX300
CEL-44LC	MVX401/405/501
CEL-54LC	MVX440/470
CEL-72LC	CDM4000/4500
CEL-74LC	MVX605
CEL-84LC	CDM130/135
CEL-93LC	2500
CEL-96LC	CDM120
CEL-97LC	1000
CEL-98LC	CDM3300/3500
CEL-99LC	CDM8000
CEL-115LC	CDM9100
CEL-118LC	PCX3600
CEL-3000LC	CDM3000

PART NO.	FITS
ERICSSON	
CEL-12FLC	200/300 SERIES FLIP
CEL-12LC	200/300 SERIES
CEL-47LC	738/788/T18LX
CEL-49FLC	600 SERIES FLIP
CEL-49LC	600 SERIES
CEL-100LC	T-28
CEL-119LC	2218/2618/2638
CEL-1228LC	1228/R280
FUJITSU	
CEL-10LC	PCX / PC SLIM
CEL-69LC	PCZ / PERSONA
HYUNDAI	
CEL-73LC	110
JRC	
CEL-39LC	PTR-850
CEL-43LC	PTR-829/ 830/831
LUCKY GOLDSTAR	
CEL-70LC	LG300
CEL-89LC	LG330W
CEL-120LC	V111/ SP110
MITSUBISHI	
CEL-18LC	AH-129 250/350
CEL-17LC	3500/4000
CEL-90LC	G310 T300
CEL-93LC	T200
CEL-101LC	T250
CEL-4500LC	4500
CEL-G75LC	G75

PART NO.	FITS
MOTOROLA	
CEL-5LC	FLIP
CEL-5ELLC	ELITE
CEL-41LC	STARTAC
CEL-48LC	350
CEL-60LC	POPULOUS
CEL-75LC	SC3160/3180
CEL-94LC	V60
CEL-102LC	VADER
CEL-121LC	D520
CEL-122LC	M3090/3097
CEL-250FLC	200/250/1200
CEL-300LC	300/500
CEL-300FLC	3000
CEL-650LC	PIPER/650
CEL-2000LC	SELECT 2000
CEL-3000LC	SELECT 3000
CEL-3682LC	M3682
CEL-6000LC	SELECT 6000
CEL-7089LC	L7089
CEL-LITELC	MICROTAC LITE
CEL-M70LC	M70 / 75 / 77
CEL-SC725LC	SC725 / 925
CEL-TLC	TALKABOUT
CEL-VLC	V PHONE
NEC	
CEL-19LC	P100/110
CEL-23LC	P700/800 SERIES
CEL-61LC	MAX920/960
CEL-103LC	2600/2610
CEL-2100LC	P2100/3100

CELLULAR LEATHER CASES

PART NO.	FITS
NEXTEL	
CEL-94LC	i50 i90
COM-8100LC	i280/i370
COM-8615LC	i1000
COM-8971LC	i500
COM-i600LC	i390/i600
COM-i700LC	i550/i700
COM-i2000LC	i2000
NOKIA	
CEL-24LC	100/105
CEL-25LC	101
CEL-27LC	232
CEL-38LC	212 /2160/2110
CEL-42LC	636/638
CEL-46LC	918
CEL-57FLC	6162 FLIP
CEL-57LC	5100/6100 SERIES
CEL-59LC	252
CEL-76LC	8810/8860
CEL-91LC	8210/8260/8290
CEL-104LC	282
CEL-105LC	3310/3390
CEL-239LC	239
CEL-2190LC	2180/2190
CEL-7110LC	7110/7160
OKI	
CEL-40LC	1325/1335
CEL-45LC	1145/1150

PART NO.	FITS
PANASONIC	
CEL-33LC	EBH-30
CEL-34LC	EBH-40 / 50
CEL-51LC	EBH-63/64/65
CEL-52LC	EBH-10/20
CEL-114LC	TX210
QUALCOMM	
CEL-56LC	800/1900
CEL-63LC	820/1920
CEL-66LC	Q PHONE
CEL-68LC	860/1960
CEL-88LC	Q2035/2230
CEL-106LC	1201/1300
CEL-113LC	Q3035
CEL-122LC	Q6065
SAMSUNG	
CEL-55LC	1000/1500
CEL-64LC	SCH1900/1910
CEL-67LC	SCH2000/2010
CEL-71LC	BAM211
CEL-78LC	SPH-10
CEL-80LC	411
CEL-87LC	3500
CEL-107LC	M100
CEL-108LC	811
CEL-109LC	620/6100
CEL-123LC	T100
CEL-2500LC	2500/2540
CEL-8500LC	850/8500

PART NO.	FITS
SANYO	
CEL-77LC	SCP-3000
CEL-110LC	SCP-4000
CEL-4500LC	SCP-4500
SONY	
CEL-8LC	CM-H333
CEL-56LC	500/ 600/800
CEL-63LC	820/1920/2700
CEL-106LC	1201/1300
CEL-1300LC	2200/3200
TECHNOPHONE	
CEL-25LC	405/415
CEL-24LC	EZ400
CEL-27LC	PC-515
CEL-38LC	TD-815
UNIDEN	
CEL-35LC	CP4600 / 4900
CEL-36LC	CP5500
CEL-37LC	CP5600/6600
CEL-111LC	PCD1000/2000
CEL-112LC	MINI 200