


- Easy to install and replace cassette type accessories
- Screw type terminals
- One design for both 100/250AF

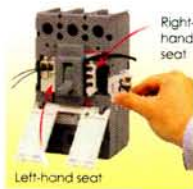

ACCESSORY KITS

Frame Size 1F, 2F, 100A, 250A

Auxiliary Contacts (AX)	List Each
Catalog No.	
CB-AX 1 (1NO/1NC Form C)	\$38
CB-AX 2 (2NO/2NC Form C)	\$76
CB-AX 3 (3NO/3NC Form C)	\$114
CB-AX 4 (4NO/4NC Form C)	\$152



Trip Alarm (AL)	List Each
Catalog No.	
CB-AL 1 (1NO/1NC Form C)	\$38
CB-AL 2 (2NO/2NC Form C)	\$76



All above Accessory Kits can be field installed

UnderVoltage Trip (UVT)	List Each
Catalog No.	
CB-UVT-24V AC/DC	\$116
CB-UVT-48V AC/DC	\$116
CB-UVT-110V AC/DC	\$116
CB-UVT-220V AC/DC	\$116
CB-UVT-480V AC	\$116




Shunt Trip Kits (SNT) (For remote trip of CB)

Catalog No.	AC	DC	AC/DC	List Each
CB-SNT-MB			12V	\$116
CB-SNT-NB			24V	\$116
CB-SNT-OB			48V	\$116
CB-SNT-UB			60V	\$116
CB-SNT-PD		100-110V		\$116
CB-SNT-AA	100-125V			\$116
CB-SNT-QD		125V		\$116
CB-SNT-RD		200-220V		\$116
CB-SNT-CA	200-240V			\$116
CB-SNT-SD		240V		\$116
CB-SNT-TB			250V	\$116
CB-SNT-DA	380-440V			\$116
CB-SNT-EA	440-480V			\$116
CB-SNT-FA	500-550V			\$116

Mechanical Interlock

These are applied between two breakers to prevent mechanically closing together.

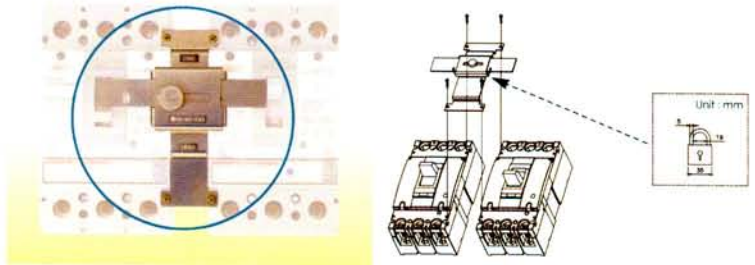

Catalog No.	Applied MCCB	List
CB-MI-23S	2 & 3 poles 100AF (15 to 100A)	\$80
	2 & 3 poles 250AF (125 to 225A)	

Internal Accessories

Location & Max. attachable No.

Accessories	Max. attachable No.			LOCATION
	Left	Right	Max	
Aux. a/w(AX)	2	2	4	
Alarm s/w(AX)	1	1	2	
SNT or UVT	1	-	1	

Ratings of the AX & AL

Applied MCCB	AC			DC		
	Operational voltage (V)	Max. switching current (A)		Operational voltage (V)	Max. switching current (A)	
		Resistive load	Inductive load		Resistive load	Inductive load
CBC-N 100 250	125	5	3	30	4	3
CBC-H 100 250	250	3	2	125	0.4	0.4
CBC-L 100 250 (E)				250	0.2	0.2

Terminal Covers

Catalog No.	For Breaker Type	List Each Set
TB-13T	CBC-1H	\$18
TB-23T	CBC-2H CBC-1L, 2L	\$20



* Provides Finger Protection Line & Load side

Set includes two covers.